



Upgrading firmware for the TS9000/A, TS9050 and TS9080 to run under Windows10

The TS9000/50/80 machines were not designed to run on Windows10, since their firmware is incompatible. However, it is possible to upgrade the firmware, but it requires an old WindowsXP machine to achieve this:

1. First you must install and run your analyser on an old WindowsXP machine
2. Go to our website www.microgenelectronics.com and download the latest iLog software for your analyser and run Setup
3. If your WindowsXP machine has not run your analyser before, you must download and install the latest USB driver or simply use your original Microgen CD disk that was supplied with your analyser
4. Connect your analyser to the WindowsXP machine and run the iLog application
5. Click CTRL U and this dialog will appear:

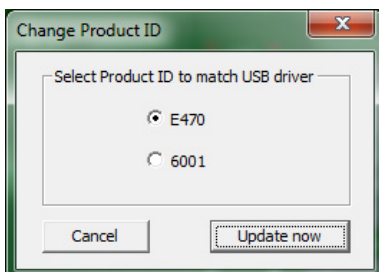

6. Select '6001', click 'Update now' and after a few seconds you will get this message:

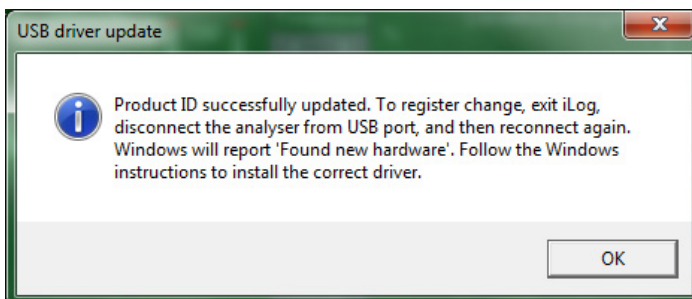

7. Disconnect your analyser from your old WindowsXP machine and finally connect to your new Windows10 machine.
8. Windows update will now automatically install the correct USB driver. The front panel LED will light, indicating that the driver is loaded
9. Disconnect, wait 5 seconds and reconnect your analyser
10. Install the latest iLog software on your Windows10 machine
11. Finally double-click this icon to run the iLog Application:

